

 
 
Outdoor Rigid Sign Base

Scan to view Product Instructional Video or visit:
[www.creativedisplaysite.com/
Outdoorrigidsignbase.html](http://www.creativedisplaysite.com/Outdoorrigidsignbase.html)



Product Parts

- 1 - Base
- 2 - Coupler (x2)

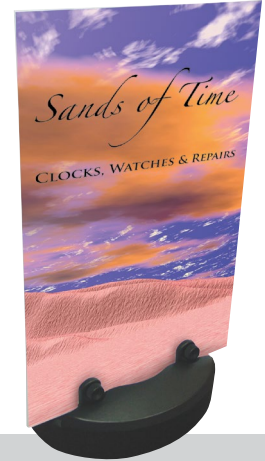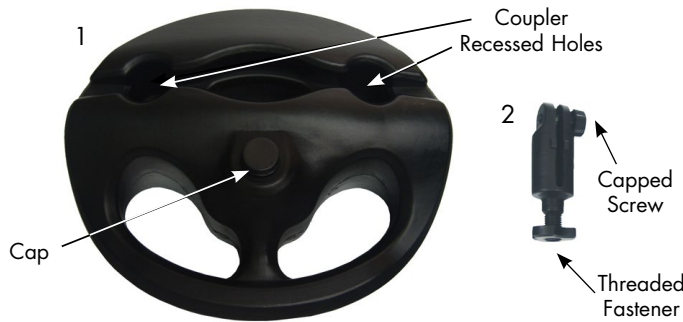

Sign Install & Display Set-Up

Step 1

Begin by removing all parts from the box and place on a clean, flat surface along with your sign.

Remove the Threaded Fasteners from the Couplers (2).



Step 3

Flip the Base (1) on it's side and fully attach the Threaded Fastener back on to the Coupler (2).


Repeat Steps 2 and 3 for the second Coupler (2).



Step 5

Mark the position of the Coupler's (2) holes on your graphic and set aside.

Using a 3/8" drill bit, place holes at the marked points on your graphic.

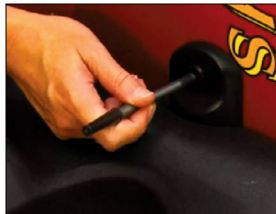

Step 7

To fill the Base (1) with ballast material, unscrew the Cap from the top of the Base (1) and fill the void with your ballast material. Reinstall the Cap when filled.



Step 2

Insert the first Coupler (2) into the Recessed Hole located in the Base (1) with the Capped Screw facing the back of the Base (1).



Step 4

Remove the Capped Screws from both Couplers (2) and slide your graphic into the slots, positioning the graphic so that it is centered.



Step 6

Place the graphic back in to the Base (1) and align the holes of the Couplers (2) with the holes of your graphic.

Thread the Capped Screw back into the Coupler (2) until fully tightened. Repeat for second Coupler (2).



Storage & Care

Place all product parts into box and store in a cool, dry location.

To clean, wipe with damp cloth.

Warranty Information: All products are designed to provide the user with a cost-effective and durable product. Standard warranty is a 'one year parts and labor' warranty which warrants product against defects in material and workmanship. It does not cover damage due to accidents, abuse, or normal wear and tear. Products found to be defective will be replaced or repaired at factory's discretion.